

DEAR CUSTOMERS :

Thank you for choosing **PGO** scooter. It is a fact that the efficiency and sustaining life of each scooter depend heavily on the operating method of each user. Thus this owner's manual will provide you a precise knowledge of easy adjusting, sustaining and precaution for your scooter. We hope you will read and check it carefully.

Please recognize your scooter model clearly in order to read the following instruments.

If there is any question, please do not hesitate to ask your dealer for assistance.

We hope you will enjoy it !

Manufactured by:
Motive Power Industry Co., Ltd.

CONTENT

Warranty Card.....	1	Catalyst	26
Scooter safety.....	2	Notation for operation and riding.....	27
Part location.....	4	Starting the engine	27
Identification.....	6	Warming up the engine.....	28
The function of switch & controller	9	Brake operation.....	29
Main switch	9	Engine initial run-in.....	30
Speedometer	10	Parking vehicle	31
Handlebar Controls.....	13	Periodical maintenance	32
Steering Lock.....	14	Periodical maintenance table	33
Seat Lock	14	Exhaust control system.....	36
Fuel Tank Cap.....	15	The air cleaner	37
Kick Starter Lever.....	15	The spark plug	38
Luggage Compartment	16	Brake adjustment	39
Pre-riding inspection.....	17	Brake fluid check.....	40
Brake.....	18	Front fork check.....	41
Brake Fluid	19	Fuse replacement	42
Engine Oil.....	20	Battery	42
Air Cleaner	22	Specification	43
Tire.....	24	Wire diagram	46
Throttle Grip	25	Periodical maintenance record.....	48
Lamp & Signal Light.....	25		
Switches	25		
Fuel	25		

Check List before Delivery

Name : _____ Tel : _____ Age : _____ Sex : _____
 Address : _____
 Model : _____ Engine No : _____ VIN No : _____
 Delivery date : _____ Year _____ Month _____ day _____ Dealer : _____

NO	Check Item	Y	N	NO	Check Item	Y	N
1	Steering of Handle Bar			8	Tire Pressure		
2	Gap of Brake Lever			9	Confirm Engine No & Document		
3	Lights and Horn			10	Owner's Manual		
4	Fuel Tank and Fuel Kind			11	Operating Method Introduction		
5	Engine Oil			12	Periodic Maintenance introduction		
6	Disk Brake fluid			13	Warranty Introduction		
7	Engine Coolant(M2-250)						
Staff Signature :				Customer Signature :			

Suggestion :

※Please Sign both customer & service Staff.

※ Mail this chart to agent, and then the Warranty will be effective.



PGO Warranty Card

Name		Telephone	Registration date
Address			
Model		Displacement CC	Engine NO. VIN. No.

Customer Signature

Dealer Signature

SCOOTER SAFETY

▲WARNING

.Scooter riding requires special afford on your part to ensure your safety.

Know these requirements before you ride:

SAFE RIDING RULES

1. Always make a pre-ride inspection(page 13) and perform any needed adjustments or repairs before you ride the scooter.
2. Many accidents involve inexperienced riders. Most countries require a special scooter riding test or license. Make sure you are qualified before your ride.
NEVER lend your scooter to an inexperienced rider.
3. Many automobile/scooter accidents happen because the automobile driver does not "see" the motorcyclist. Make yourself conspicuous to help avoid the accident that wasn't your fault:
 - Wear bright or reflective clothing.
 - Don't ride in another motorist's "blind spot"
4. Obey all national and local laws and regulations.
 - Excessive speed is a factor in many accidents. Obey the speed limits, and NEVER travel faster than conditions warrant.
 - Signal before your make a turn or lane change. Your size and maneuverability can surprise other motorists.
 -

5. Don't let other motorists surprise you. Use extra caution at intersections , parking lot entrances and exits, and driveways.
6. Keep both hands on the handlebars and both feet on the floorboards while riding. A passenger should hold on to the scooter or the feet on then passenger foot pegs.
7. Never leave your scooter unattended with the engine running.
8. Moderate your speed when ridding over bumpy roads. Avoid hitting road hazards, such as sharp bumps and holes, in the road surface. These hazards can cause loss of control or structural damage to the vehicle.

6.1 BF-model (B1)Part location:




6.2 BF2-model(B2) Part location:



IDENTIFICATION

1. Recognize your vehicle model according to license document or manufacturing document.
2. This manual includes 5 kinds of engine models:
 - LIBRA(I'ME)-50: abbreviated as “BF-50” is 2 stroke (2T) / 50 C.C engine..
 - LIBRA(I'ME)-125: abbreviated as “BF-125” is 4 stroke(4T) / 125cc/ carburetor or EMS engine.
 - LIBRA(I'ME)-150: abbreviated as “BF-150” is 4 stroke(4T) / 150cc / carburetor or EMS engine.
 - X-HOT 50: abbreviated as “BF2-50” is is 2 stroke (2T) / 50 C.C engine.
 - X-HOT 125: abbreviated as “BF2-125” is 4 stroke(4T) / 125cc / carburetor or EMS engine .
 - X-HOT 150: abbreviated as “BF2-150” is 4 stroke(4T) / 150cc / carburetor or EMS engine .
3. Because this manual is suitable for all **LIBRA(I'ME)** & **X-HOT** serial models, there are many different operations between every model. Once you see a model indication bar appears above the page, for example:

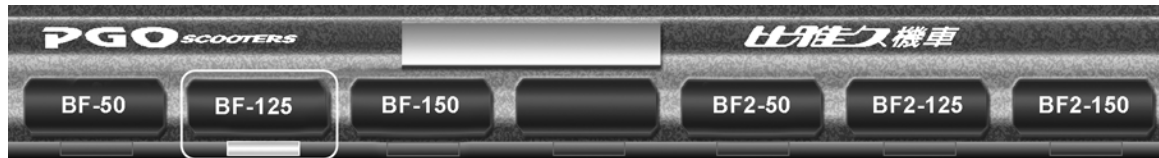

The “ **BF-125** “ model button lights on, and the lower bar is filled, that means this page is suitable for “**BF-125** “.

IDENTIFICATION

2.Engine No. is located (stamped) on the rear side of the left crankcase.



NOTE:

The upper row is model type, the lower row is the production serial numbers.

Your dealer need this number for ordering the parts, please write down the engine no. for their reference.



IDENTIFICATION

3. Vehicle Identification Number (VIN) is located (stamped) inside the rear battery cover.



NOTE:

The first 9 digitals are model type, the last 8 digitals are production serial numbers.


Your dealer need this number for ordering the parts, please write down the engine no. for their reference.

THE FUNCTION OF SWITCHES

1. MAIN SWITCH

1. All the power is cut off, the key can be pulled out at this position.
2. The power is ON, engine can be started, the key can not be pulled out at this position
3. The handle bar is locked at this position.
4. “Push + turn counterclockwise”:
to open the seat.
5. When at position #1, “Push + turn clockwise”
to open the fuel cap.
6. For anti-thief purpose, push to close the core
of key set,
7. Press the key to get anti-thief key out.
8. Push the anti-thief key into position #8, then
the core of key set will open again.



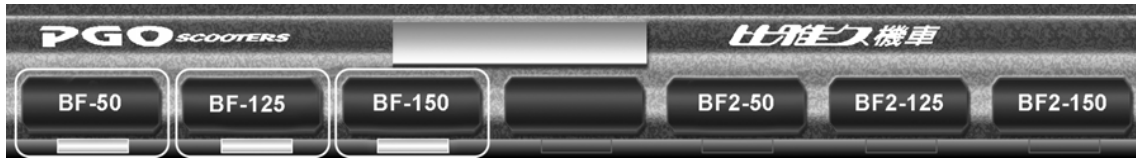

■ 2.1 LCD SPEEDOMETER

A · Main items

#1.SELECT button: refer to next page

#2.ADJUST button: refer to next page

#3.EMS check(red)

- Self-test whenever turn on the key for ~3 seconds.
- When lights on again during driving, please contact your PGO dealer to check the EMS units.


#4.Engine oil warning light (orange)


- 2T model: fill the 2T engine oil ASAP.
- 4T model: replace the 4T engine oil, then Reset the counter.

#5.Engine speed: * 1000RPM/ unit

#6.Signal indicator (green) : when acting the turn lights

#7.High beam (blue) : when (high beam) or (PASSING)

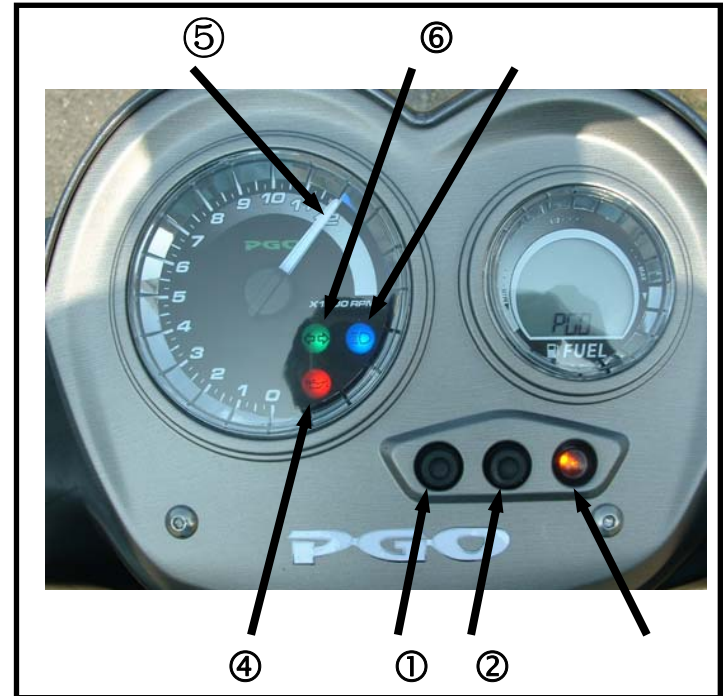

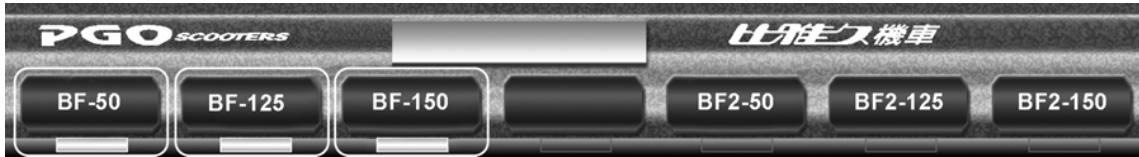

#8. Fuel meter: will twinkle when below 3 grids


#9. when reaching to this point, it will twinkle to reminding you to add fuel ASAP.

#10. Speedometer

can switch from **km/h** to **mile/h**


#11. Vehicle speed:

can change unit by(km/h) or (mile/h)
display mode: (ODO) or (TRIP)

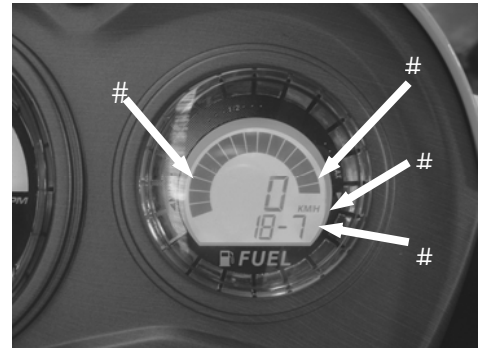

B. Operating instruments:

function mode	key	display	SELECT	ADJUST	result
Vehicle speed	ON	km	Click		Mile
		mile	Click		Km
(ODO)/ (TRIP) switching	ON	ODO		Click	TRIP
		TRIP		Click	ODO
Reset (TRIP)	ON	TRIP		Click 3 sec.	Reset TRIP to 0
Reset (4T oil indicator)	ON	Forever ON	Click 3 sec.		twinkle
		twinkle		Click 3 sec.	OFF
Cancel Reset (4T oil indicator)	ON	twinkle	Click		Forever ON

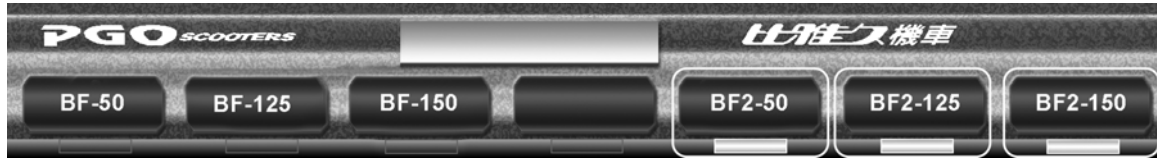

8. 2. 2 LCD SPEEDOMETER

#1. **SELECT** : refer to next page

#2. **ADJUST** : refer to next page

#3.EMS check(red)


- Self-test whenever turn on the key for ~3 seconds.
- When lights on again during driving, please contact your PGO dealer to check the EMS units.


#4.Engine oil warning light (orange)

- 2T model: fill the 2T engine oil ASAP.
- 4T model: replace the 4T engine oil, then Reset the counter.

#5.Engine speed: * 1000RPM/ unit

#6.Signal indicator (green) : when acting the turn lights

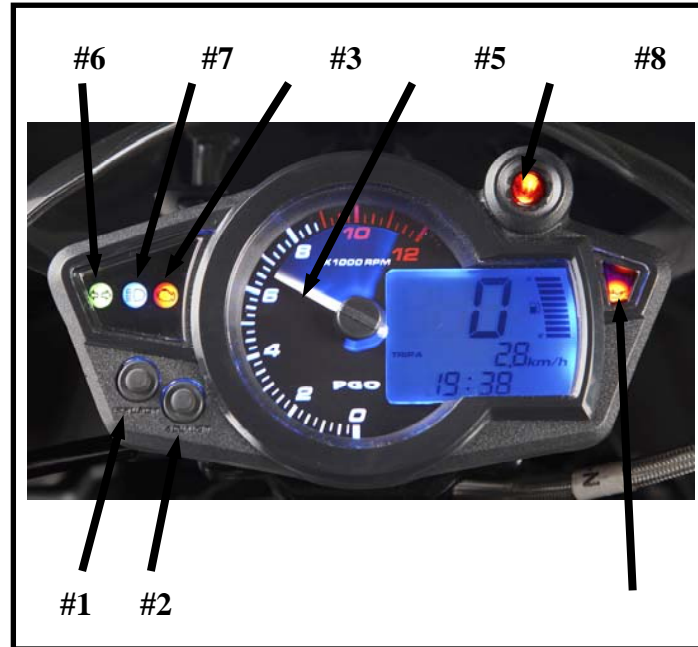

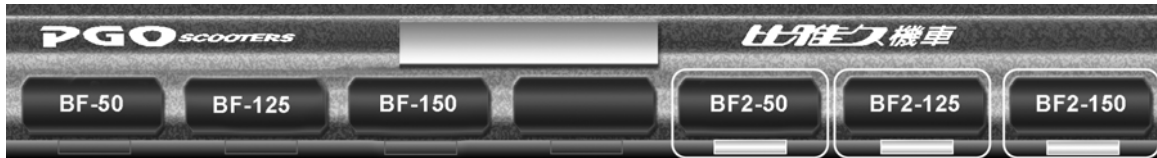

8. 2 LCD SPEEDOMETER

#7.High beam (blue) : when (high beam) or (PASSING)

#8 Vehicle speed warning lamp :
turn on automatically when reaching the specified vehicle speed.


#9.Fuel meter: will twinkle when below 3 grids.


#10.Vehicle speed:

can change unit by (km/h) or (mile/h)
display mode: (ODO) or (TRIP)

#11.Display mode :

display mode: (ODO) or (TRIP)

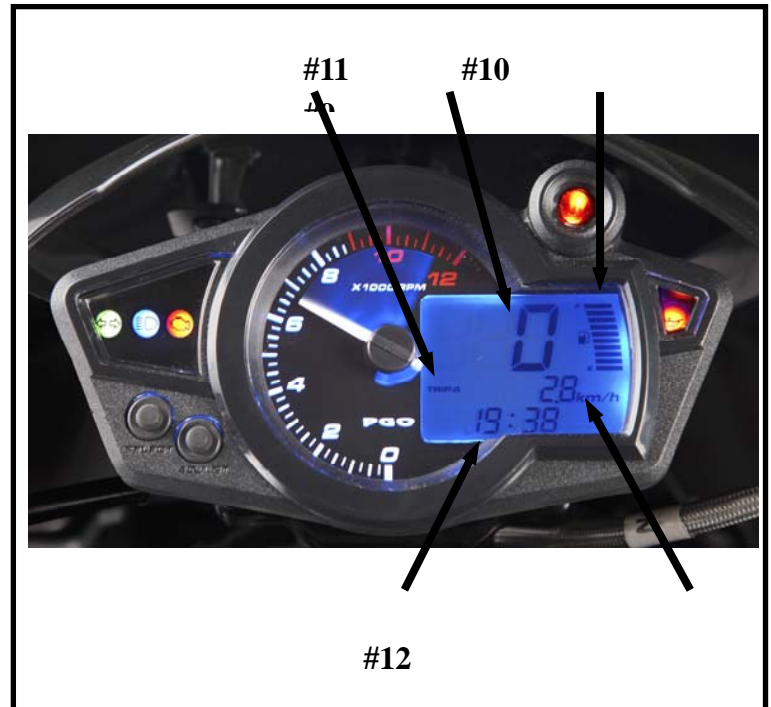

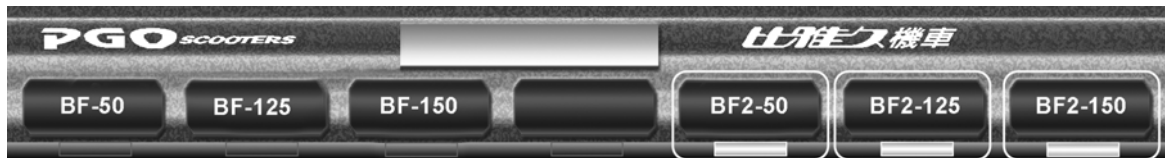

B. Operating instruments:

function mode	key	display	SELECT	ADJUST	result
Vehicle speed	ON	km	Click		Mile
		mile	Click		Km
(ODO) (TRIP) switching	ON	ODO		Click	TRIP
		TRIP		Click	ODO
Reset (TRIP)	ON	TRIP		Click 3 sec.	Reset TRIP to 0
Reset (4T oil indicator)	ON	Forever ON	Click 3 sec.		twinkle
		twinkle		Click 3 sec.	OFF
Cancel Reset (4T oil indicator)	ON	twinkle	Click		Forever ON

function mode	key	display	SELECT	ADJUST	result
Vehicle speed(#8)setting	ON	normal	Click 3 sec.	Click 3 sec.	Speed twinkle
		twinkle		Click	30~199 increasing
		twinkle	Click 3 sec.		Switch setting
clock(#12)setting	ON	Hour twinkle		Click	0~23 increasing
		Hour twinkle	Click		Minute twinkle
		Hour twinkle		Click	0~59 increasing
		Hour twinkle	Click		normal

HANDLE-BAR CONTROLS

1. HI/LO BEAM SWITCH

HI-The high beam is on "≡D"

LO-The low beam is on "≡D"

Press the lower part to make a passing signal.

2. Turn Signal Switch

Move to ← to signal a left turn, → to signal a right turn.

Press to turn signal off.

3. Horn Button

When the horn button is pressed, the horn will sound.


4. HEADLIGHT Switch

ON-Headlight, position light, taillight and meter light will be on, when the engine is running.

5. STARTER BUTTON

The starter button is below the headlight switch .

When the starter button is pressed, the starter motor cranks the engine.

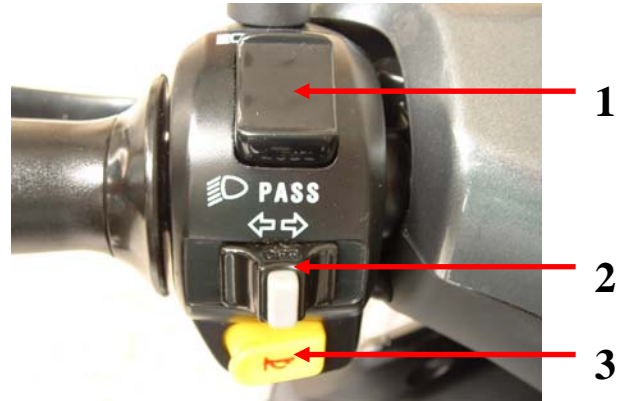

STEERING LOCK

To lock the steering, turn the handle all the way to left and turn the key from

"A" to "⊗" then remove the key.



NOTE:

Do not turn the key to "⊗", while riding.
The scooter loss of control will occur.

SEATLOCK

Push the key and turn counterclockwise to open the seat.




FUEL TANK CAP

- Insert the key into ignition switch, and keep in "⌚" position. Push the key and turn clockwise to open the fuel cap.
- Push the cap forward to lock it



KICK STARTER LEVER(EXCEPT EMS MODEL)

Swing the lever outwardly. Kick the lever down slowly till the gear stop, then kick the lever down strongly to star the engine.

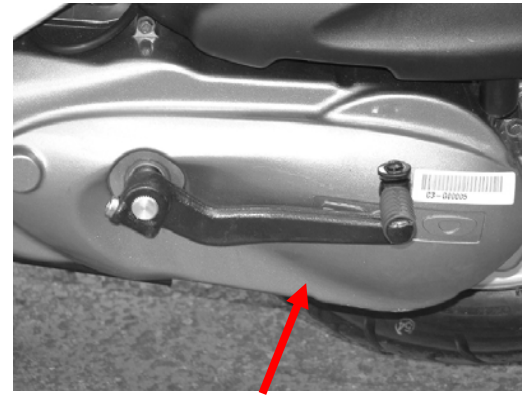

LUGGAGE COMPARTMENT

The luggage compartment is under the seat. Whenever the seat is opened, there is a lamp inside the luggage will light on.

NOTE:

1. The max loading weight is 5 KGS.
2. If engine has been operating over a long time. The luggage compartment become hot. Do not put luggage in the temperature
3. Do not put important or fragile goods for security reason.
4. Raining or wash may cause luggage wet

inside. **KICK**
Please use water-resistant material for luggage wrapping.
5. Please lock the cover when leaving the scooter.



PRE-RIDING INSPECTION


Please do the inspection as following before riding:

ITEM	PROCEDURE	PAGE
FRONT BRAKE	Check the brake function, clearance , brake oil level, see if it is leaking. If necessary, may refill FMVSS DOT3(4) OR SAEJ 1703 brake oil.	29,40
REAR BRAKE	Check the brake function and clearance, proper adjustment if necessary.	39
THROTTLE GRIP	Check if it is smooth, put some lubricant .	25
LUBRICANT	Adjustments if necessary. Check the oil level/according to the request to refill oil.	20
TIRE	Check the pressure, the wear out situation.	24
CONTROLLER /GAUGE CABLE	Check if smooth operation. Add lubricant if necessary.	—
BRAKE LEVER (HANDLE)	Check if smooth operation. Add lubricant if necessary.	18
CENTRAL STAND	Check if smooth operation. Add lubricant if necessary.	—
ASSEMBLY /FITTING	Check all the assembling parts, fixing & adjusting if necessary.	—
FUEL TANK	Check the fuel level. Refill up if necessary.	10
LAMP /SIGNAL LIGHTS	Check if it is operating good condition.	25

BRAKE


Adjustment:

1. Measure the distance of the rear brake lever play before the brake starts to take hold.
Free play should be: 10~20mm.
2. Make free play adjustments by turning the adjusting nut at the brake arm.
Make sure the cutout on the adjusting nut is seated on the brake arm pin after making final free play adjustment.
3. Apply the brake several times and check for free wheel rotation when released.

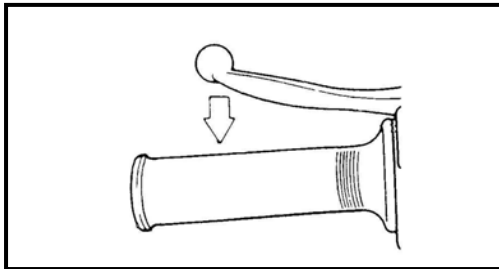

FRONT BRAKE

The front brake will be on function when hold the handle and pull the right hand lever.

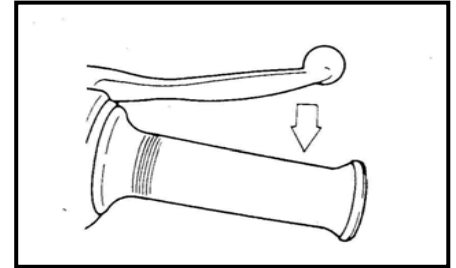

NOTE:

If the pre-riding inspection is not performed, severe personal injury or vehicle damage may result. Inspect your scooter, and perform any needed adjustments or repairs, Every day before you ride it. The items listed above will only take a few minutes to check and, in the long run, can save time, expense, and possible your life.

BRAKE (Please refer to page35)

1.Front /Rear brake levers

Inspect the free play of levers. Make sure the function is well.

Please check the brake at low speed, adjust the free play if it is not correct.

CAUTION

If the brake lever feels soft when operating,
Which means the brake system has problem.
Do not ride the scooter before the problem is ruled out.

2.BRAKE FLUID (Disk Brake)


Check the fluid level. Refill it if necessary.
Fluid Spec. FMVSS Dot3 or SAE J1703

3.DISK BRAKE PAD

Please refer to page 36. Please go to the PGO Dealer when this brake needed repairing.


BRAKE FLUID LEAKAGE INSPECTION

Hold the brake level for few minutes to check if there is any fluid leaks from the hose connector or main cylinder.

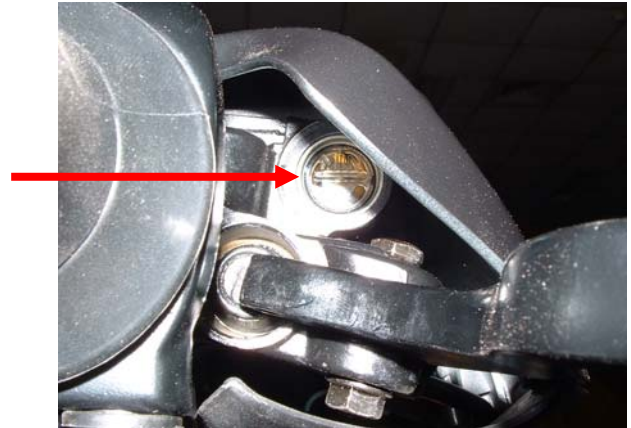

CAUTION

Go to the PGO dealer immediately when find the brake fluid is leaking.
The leakage means the braking system has deadly dangerous problem.

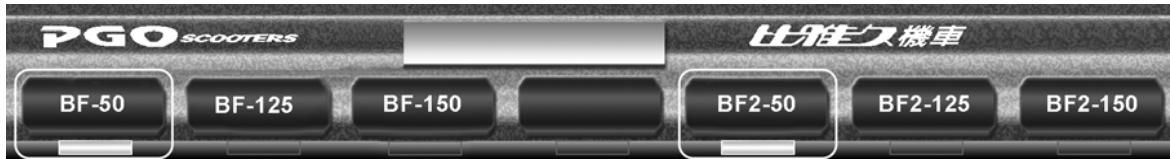


ENGINE OIL for 2T Engine

- Oil warning indicator

This lamp will make self test (light ON) for about 2 seconds whenever turn on the main key, if it lights on again after self test, that reminds you have to fill the oil as soon as possible.

- Open the seat, and lift the battery cover.
- Take off the oil tank cap, and fill the 2T oil carefully




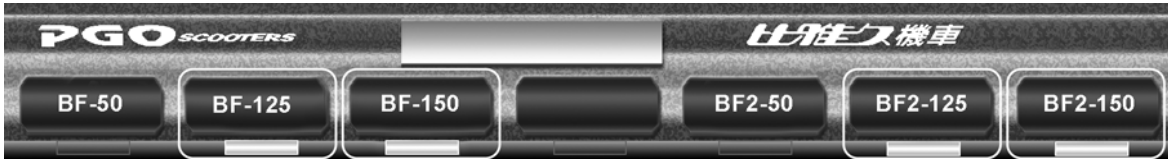


ENGINE OIL

1. 4T Engine (125 / 150 CC)

- Engine oil shall be replaced per 1,000 kilometers.
- Engine oil volume must be examined after engine warm-up 2~3 minutes. Be sure to execute on flat road.
- Draw out and examine the oil gauge. Please refill if the volume below the low warning line.

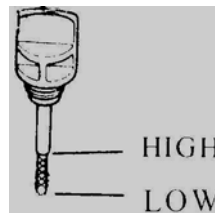

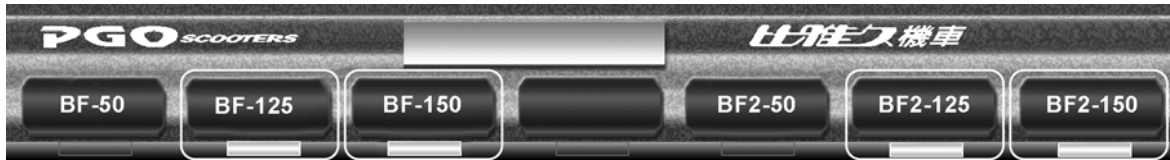


AIR-CLEANER

The air filter will keep dust away from the engine and also protect it against wearing out. Please ask the dealer to check & clean the filter periodically, or by yourself.
(ref:page 33)


1. 4T Engine (125 / 150 CC)

Wet paper filter element

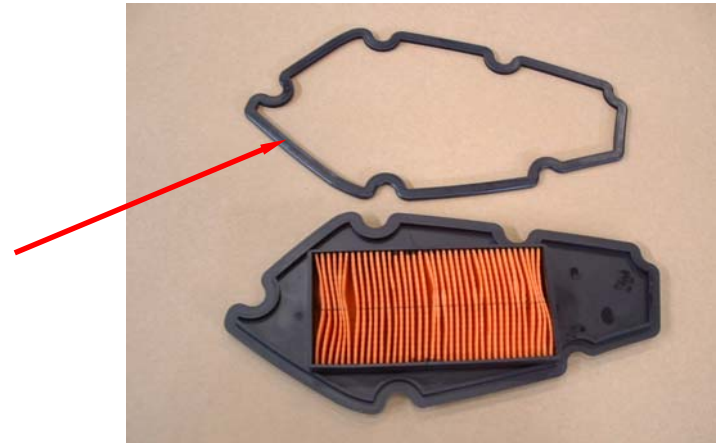

Note:

Don't forget to install the element seal !

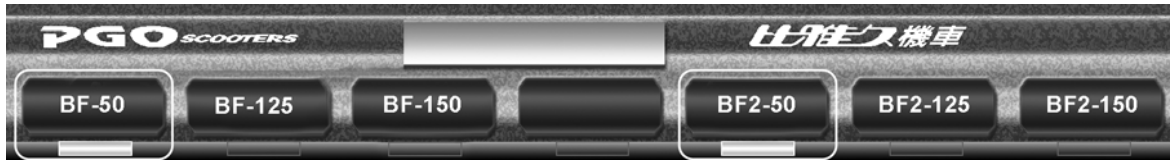


AIR-CLEANER

The air filter will keep dust away from the engine and also protect it against wearing out.
Please ask the dealer to check & clean the filter periodically, or by yourself.
(ref:page 33)

2. 2T Engine (50 CC)

Sponge filter element




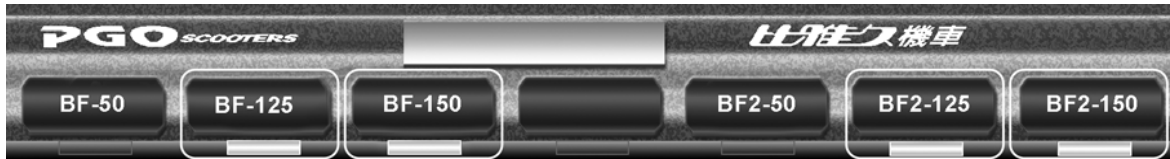

Fuel draining device (EMS model only):

If the vehicle is stored continually more than 1 month, the fuel inside the hose might be bad for starting the engine, then you have to:

1. Withdraw the rubber cap inside the luggage.
2. Turn ON the main key. (Don't start the engine now!)
3. Press the drain valve by finger to drain the fuel. (Not necessary to dismantle the luggage)
4. After draining the bad fuel inside the hose, then you can start the engine.

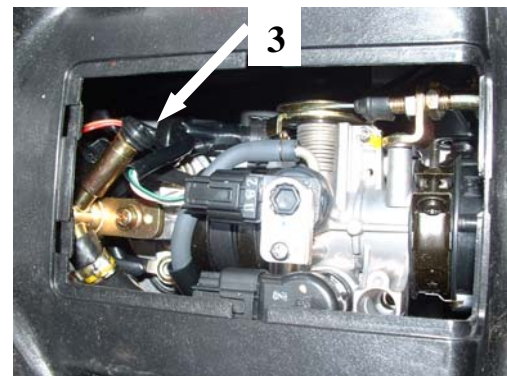

TIRE

To secure the best performance & extend life-span, please pay your attention to the following:

1.TIRE PRESSURE

Be sure that tire pressure in accordance with the standard pressure.

NOTE:

The inside temperature of tire must be even to outside or else pressure need to be adjusted. Besides the factor of loading, weight even cruising speed should take into consideration before adjusting.

The normal tire pressure:

Front: $2.0\text{kg}/\text{cm}^2$

Rear: $2.0\text{kg}/\text{cm}^2$



a.TIRE PRESSURE TOO HIGH

2.SIMPLE CHECK:

Check the tire appearance before riding.

Please ask your dealer for repairing or replacing if the appearance has been detected significant worn out or stabbed by nails, or glass.

3.INSPECTION FOR THE DEPTH OF THE TIRE GROOVE:

The appearance will become slippery due to significant worn out dusty or wet road riding.

Please replace the tire if the depth is less than 0.8mm, see the following picture for reference.



b.TIRE PRESSURE TOO LOW


THROTTLE GRIP

- Turn the grip and check the clearance & operation situation.
- Make sure the grip will automatically return to the original position.

Ask your dealers for adjusting advice if necessary.

LAMPS & SIGNAL LIGHTS

Make sure the front lamp, rear lamp, brake lamp, turn signal lamp, tail lamp and all other indicator lights working well.

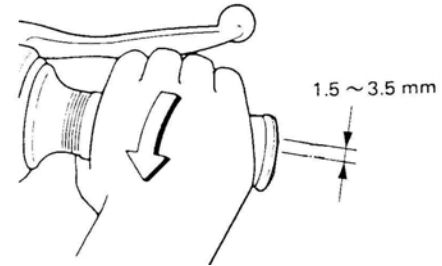

SWITCHES

Make sure the switch of head lamp, turn signal lamp, brake lamp , horn, start button, and over take lamp working well.

FUEL

Be sure sufficient fuel in tank.

Tank capacity: about 7.0 L

CAUTION:

1. Please fill the unleaded gas if your scooter is equipped with catalyster.
2. Do not fill up the gas over the neck of gas entrance , otherwise it will be spilling out due to the hot temperature.
3. It may cause inflammable if gas is split onto the engine or muffler.



CATALYSTER (OPTIONAL DEVICE)

Catalyst device is designed for decreasing air pollution from exhaust system and it is mounted inside the muffler.

1. Make sure to park your scooter away from flammable material, pedestrian or child to avoid danger due to yielding hot from muffler cover.
2. Don't try to use any fuel if it is not unleaded gas.
3. Don't try to turn off the main switch when riding.
4. Don't try to ride, idle or stop on the surface of inflammable.
5. Please keep your engine in good function all the time, otherwise high temperature will yield from catalyst device due to short circuit ignition, or fuel system working abnormal.
6. Please periodically maintain your scooter to ensure exhaust control system and catalyst device working well.



NOTATION FOR OPERATION & RIDING

1. Please make sure you are familiar with all the operation system & function before riding. Please contact with your dealers if there's any question.
2. Do not start the engine in a closed place due to potential gas, threat from poisonous exhaust amassed.
3. Please be noted the side stand must be withdrawn from the ground before riding, otherwise dangerous situation may occur due to your ignore.

STARTING ENGINE

1. Turn the main switch to "⌚"
2. When the throttle is totally loosed, hold the brake lever and push the start button, or use the kick starter to start the engine.



CAUTION:


If the engine can't be started, you should loose the start button to avoid losing significant electric power. Please do not push the button over 5 seconds per each time. Try kick starter to start the engine if the start button is not working properly.

WARMING UP THE ENGINE

To protect the engine, please warm up the engine 1~3 minutes before riding. Do not immediately accelerate when the engine is cold.


NOTE:

Please read the instruction “engine initial run-in” page26 before initial riding.

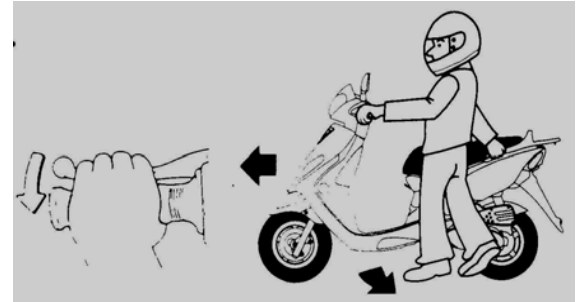



- Scooter riding (after warming up the engine):
 1. Hold the brake lever and push down the central stand.
 2. Adjust the angle of rear view mirrors within visible field.
 3. Try the function of signal light before riding.
 4. Turn the throttle grip gradually then close the signal light during riding.
- Accelerating (throttling):

Use the throttle grip control your cruise turning it to wards your side will speed up, and reversing it will slow down.

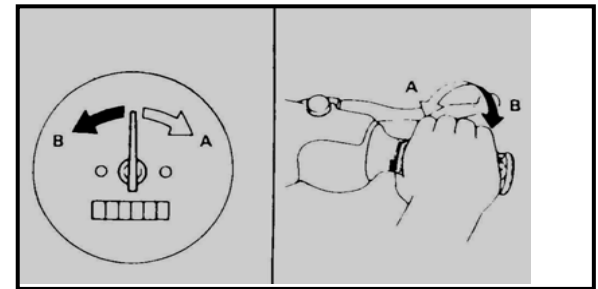

BRAKE OPERATION

1. Release the throttle grip.
2. Press front and rear brake levers gradually.

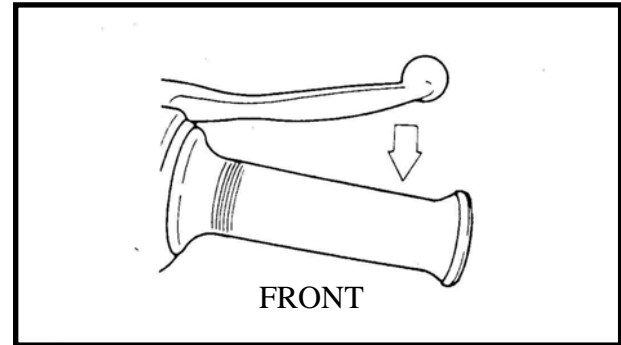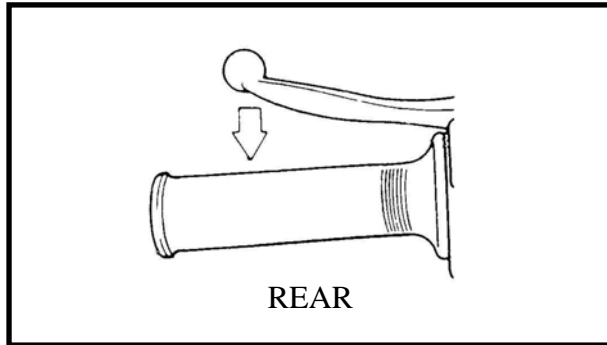

NOTE:

1. Sudden stop will cause sliding or falling down.
2. Use the braking carefully while you are turning, improper use of brake may cause sliding.
3. Slow down the speed when riding on the iron plate, railway track, wet road.
4. Braking on the wet road is difficult.
5. Slow down the speed when sloping down.

ENGINE INITIAL RUN-IN

0~1,000 km riding will be the critical period regarding scooter life span. The new engine can't afford too much loading during the first 1,000kms. Every part of the engine will be run-in to obtain the correct clearance in this period. Be sure to avoid prolonging the throttling out totally or any operation causing high temperature in the engine. Please read careful the following information.

1 .0~150 km

Avoid over 1/2 throttling operation. Cool down the engine 5~10 min/ hour. Do not cruise by constant speed for riding.

2 .150~500 km

Avoid over 1/2 throttling operation for long riding.

3. 500~1,000 km

Avoid over 3/4 throttling operation.

NOTE:


Change gear & engine oil after 300 km.

4. OVER 1,000 KM


Avoid full throttling in a long riding.

NOTE:


Please contact your dealers if any problem takes place during above periods.

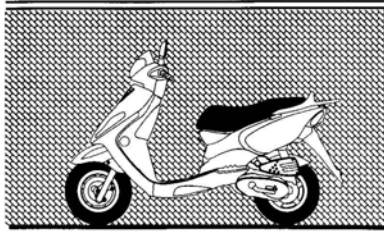

CORRECT

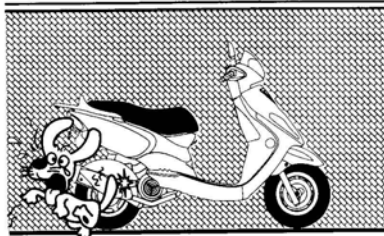

INCORRECT

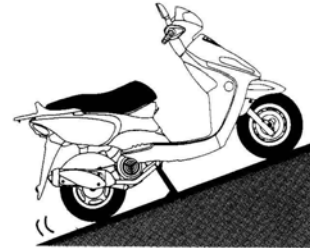

INCORRECT

PARKING:

Turn off the engine and pull out the key when parking the scooter.

NOTE:

1. Please park your scooter away from the child & pedestrians if the muffler is hot. Do not park your scooter on a slop or soft ground to avoid falling down.

2. This scooter is **optionally** equipped with side stand safety switch, whenever you park it with side stand, then the engine can not be started for your safety.



PERIODICAL MAINTENANCE

To secure the most safe & effective performance, please check, adjust and lubricate your scooter periodically. Periodical maintenance and lubrication should be acknowledge as an important instruction. Meanwhile, please pay your attention to the environment, climate, geography and riding status in order to set up a proper maintenance interval.

NOTE:

This scooter is designed to be riding on normal paved road. If under a dirt & wet condition, please clean the air-cleaner frequently, otherwise the engine will be worn out quickly.

If you are not familiar with the inspection & maintenance, please contact to your dealers.

PERIODICAL MAINTENANCE TABLE

In order to achieve safe riding, good performance and reduce pollution, please execute the recommended maintenance accordingly.

Item	Model 2T or 4T	Checking Content	MONTHS/DISTANCE(IN KM)FOR CHECKING							
			1 or 300 km	3 or 2500k	6 or 5000k	9 or 7500k	12 or 10000k	15 or 12500k	18 or 15000k	
Engine oil	2T	Add	I	According to Oil warning light						
Engine oil*	4T	Replace 800cc, total 1000cc Recommend 15W40	R	Replace it initially 300km, and then replace it per 1,000 km						
Coarse oil filter* (on oil draining bolt)	4T	Clean or replace it if necessary	C	clean it initially 300km, and then replace it per 3,000 km if necessary						
Oil Filter	125CC	Replace	R	replace it per 5000km						
Air cleaner	ALL	Crack and blockage check.		I	I	I	I	I	I	
Air filter	ALL	Clean or replace it if required		I	I	I	R	I	I	
Gear oil*	ALL	replace 90cc, total 110 cc Recommend SAE 140	R	R		R		R		
Disk & drum brake	ALL	Leaking and function check		I	I	I	I	I	I	
Clutch shoes*	ALL	Check or replace it if necessary			I		R		I	
Rear brake arm	ALL	Function check and adjustment			I		I		I	
Tires	ALL	Worn-out check or replace it if necessary		I	I	I	I	I	I	
Wheel bearing*	ALL	Fasten tightly if loosen		I	I	I	I	I	I	
Front fork*	ALL	Leaking and function check	I		I		I		I	

Item	Model 2T or 4T	Checking Content	MONTHS/DISTANCE(IN KM)FOR CHECKING						
			1 or 300 km	3 or 2500k	6 or 5000k	9 or 7500k	12 or 10000k	15 or 12500k	18 or 15000k
Steering head bearing*	ALL	Check looseness. Adjust it if required			A		A		A
Rear absorber*	ALL	Leaking and function check			I		I		I
Main/Side Stand	ALL	Function check or replace it if required		I	L	I	L	I	L
Nuts, bolts, fasteners	ALL	Tighten it if required		I	I	I	I	I	I
Battery	ALL	Recharge the battery it required. Clear the poles.		I	C	I	C	I	C
Valve gap*	4T	IN&EX: 0.08mm/ When engine is cold	Adjust it when necessary						
Carbon cleaning *	2T	Clean combustion carbon when engine output reduced			A		A		A
Spark plug*	ALL	Clear or replace if required		I	R	I	R	I	R
V belt*	ALL	Worn out check or replace if necessary.			A		A		A
Fuel feeding system*	EXCEPT EMS	Crack and blockage check. Replace it if necessary.			I		R		I
Fuel feeding system *	EMS ONLY (Injection)	Inspect hose, clamp, and replace the filter per 15,000km			I		I		R
Engine idle speed*	ALL	2T engine: 1900±100 rpm 4T engine: 1700±100 rpm	A	A	A	A	A	A	A
Carburetor idle A/F Adjustment*	ALL	Check and adjust referring to CO/HC Percentage.	A	A	A	A	A	A	A
EMS function check*	EMS ONLY (Injection)	Inspect EMS function, and clear the defect memory if necessary		I	I	I	I	I	I

REMARKS :

1. **A:** adjust **C:** clean **I:** inspect, or replace if necessary **L:** lubricate **R:** replace
2. Items with “*” mark indicate our recommendation to have it done by PGO dealer.

NOTE 1 :

For 4T engine, the engine oil shall be changed completely after run-in period 300km or one month later.
This can make sure the engine runs smoothly.

NOTE 2 :

The exchange of brake fluid

1. After disassembling of brake main cylinder or caliper, do change the new fluid.
2. Check the fluid level often, Refill if necessary.
3. Change the oil seal of main cylinder and caliper every two years.
4. Change the brake fluid hose every four years.

Exhaust control system (only be valid for the bike equipped catalyst):

Catalyzer will not be possible to be withdrawn individual, the only you have to do is to maintain fuel, ignition, intake/exhaust system periodically.

1. Maintenance procedure of air clearer (see page 33).
2. Spark plug's checking: please repair or replace if spark plug is dirty.
3. Fuel system's checking: please repair or replace if fuel pipe is jammed or broken.
4. Muffler's checking: please fix tightly once or renew a gasket if it is leaking.
5. Idle rpm's checking: please fix tightly once or renew a gasket if throttle cable.
6. Exhaust density checking while idle: please left the job to any service center of anti-pollution inspection for carburetor adjusting.

THE AIR-CLEANER

4T Engine



2T Engine (50 cc)



If there is too much accumulation of dust inside the air cleaner, it will reduce the output of engine performance and cause abnormal consumption of fuel.

Procedures of changing the air element:

1. Take off the cover of filter.
2. Draw the core of filter.
3. Clean and dry by air compressor, or replace it if necessary.
4. Put the cover back carefully to make sure fitted to the cover without leakage.

NOTE : Please do not start the engine before the air-cleaner is assembled, otherwise the piston/main case will be badly worn out.

THE SPARK PLUG

Spark plug is one of the important parts of the engine and it is easy to be checked. According to spark plug condition, you may infer the situation of the engine. The ideal color of the electrode should be light brown. If there's any problem, please ask your dealers to check will be corroded & worn out due to the hotness and dirt for the time being. If happened, please change a new spark plug.

- Standard spark plug: recommend you to use the same or equivalent specification as original PGO manufactured. (refer to Specification Chapter)
- Spark plug gap : 0.6~0.7mm for general model
- Torque: 1.2kgf-m


When checking the spark plug, please cleaning the surface of the washer and screw, the fasten it.

NOTE:

If there is no wrench or torque gauge can be used, please wrenching it by your fingers turn $1/4 \sim 1/2$ and later use the wrench to fix it to the standard torque once available.

EXCHANGE OF GEAR OIL

- Please change the oil after first 300km ride, then it is recommended to change the gear oil every 2,500~3,000 kms.
- Regular changing oil :SAE 140

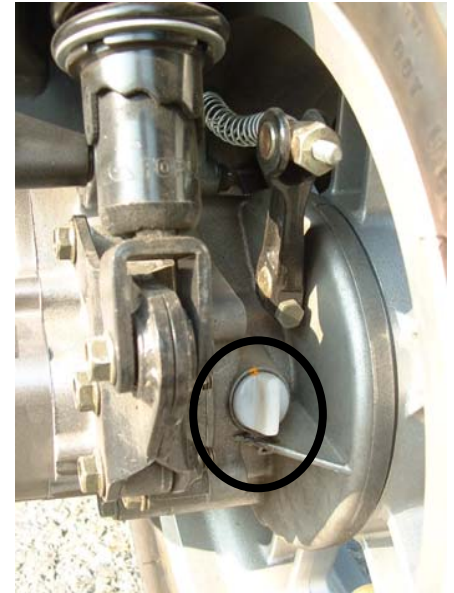

BRAKE ADJUSTMENT

The clearance of lever

(a) Front brake: 10~20 mm

(b) Rear brake: 10~20 mm

Adjust the nut if necessary.

NOTE:


Please contact to PGO dealer if the clearance is incorrect.



Rear brake check (only for Drum brake model)

The indicator will help you to easily screen the status of brake function. Please replace the shoe of rear brake if indicator reaches the warning line.

1. Brake indicator
2. Warning line

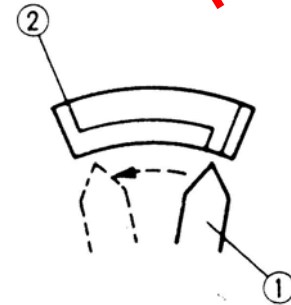


BRAKE PAD CHECK

Please acting the brake for checking. If the pads almost reach the bottom, please ask your dealers to change it by:

1. visual check if the pad worn out to the bottom of the groove or not.
2. measure the pad thickness, if it is less than 2mm.

NOTE: If the brake area is wet(getting water), the brake will be out of order and dangerous to you.

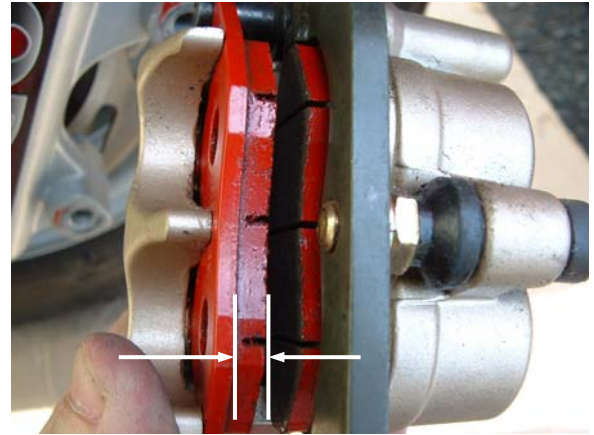

BRAKE FLUID CHECK

Insufficient brake fluid will make the air into the brake system and may cause the brake out of control. Please check the brake fluid level all the time and refill it if necessary.

1. When checking the oil level, please turn the handle bar assuring the brake oil on the horizontal position.
2. Use correct brake oil, otherwise the oil seal will be defected. This will cause the oil leaking & losing the brake function. Standard brake oil: FMVSS DOT3 or SAE J1703.
3. Refill same kind of brake oil. Mixing with different oils will yield a bad reaction and cause the brake out of order.
4. To avoid the water getting into the main cylinder, otherwise the boiling temperature of the brake oil will be declining make the air be obstructed.

- 5.Brake oil could reode the painting surface and plastic parts. If any oil were spilled out, please clean it immediately.
- 6.If the brake oil can't be refilled to the standard level, please check with your dealers.

FRONT FORK CHECK

NOTE:

In order to avoid falling down, please park you scooter firmly will be safe.

1.Eyes checking:

If any scratched, broken or leaking inside the pipe by vision.

2.Function check:


Park the scooter on flat place.

(A) Hold the handle and keep the scooter in vertical position, and then hold the front brake lever.

(B) Move up & down the front fork for several times.

NOTE:


If found the front fork is not smooth or broke, please contact your dealers.

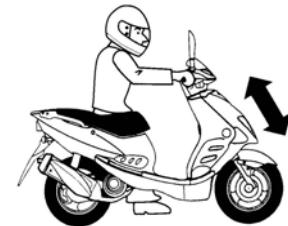

2.FUNCTION CHECK

BATTERY

1. The battery is in Maintenance-Free type (MF), so it won't be necessary to check or refill the liquid. If the liquid is leaking, please contact with your dealers A.S.A.P.
2. Battery wire connection:
 - Red wire connect to “+ (positive) pole”, Black wire connect to “- (negative) pole”.
 - EMS model: there are 2 black wires shall all connected to battery, otherwise you can't start the engine. Refer to the figure:

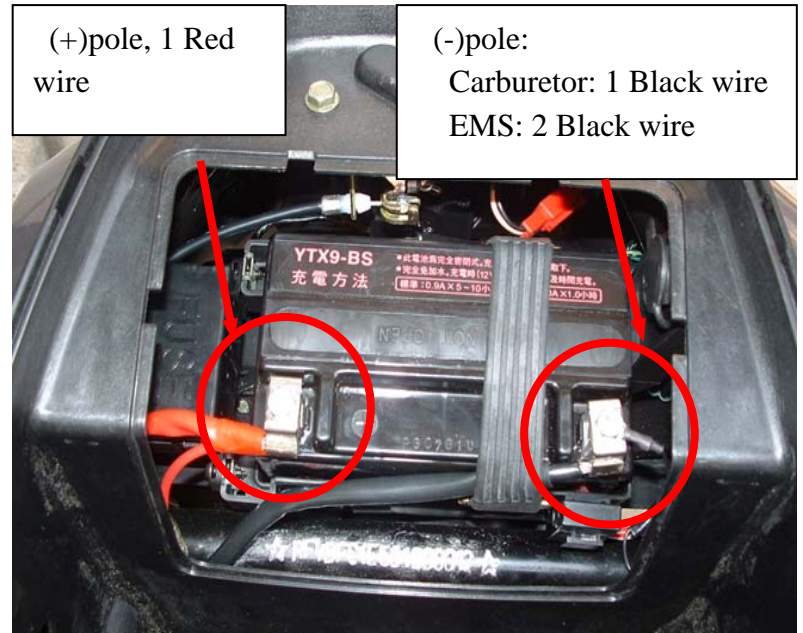

NOTE:


Please do not try to take off the sealed rubber even when charging the battery, that will damage your battery.

FUSE REPLACEMENT

1. The fuse is located beside the battery.
2. Open the battery cover.
3. If the fuse is burned out, turn off the main switch and related switches, replace a correct fuse, then turn on and check the circuit function, please contact with your dealers if the problem remains.

NOTE:

Do not use a higher ampere fuse than the standard one. A different (abnormal) fuse will damage circuit system and may cause fire.

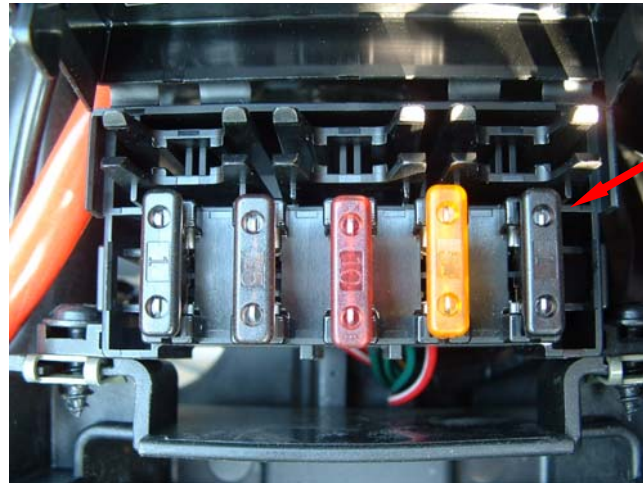

REFERENCE DATA(1)

TYPE	BF-50	BF-125	BF-150BA
DRY WEIGHT	~101KG	~118KG	~117KG
ENGINE			
type	2 stroke	4 stroke	4 stroke
model no.	P2	C1E5	C1E5
cooling	forced air cooling	forced air cooling	forced air & oil cooling
cylinder array	single	single	single
displacement	49 c.c	124.9 c.c	150.1 c.c
start system	electric and kick	electric and kick	electric and kick
lubrication system	separated pump	compress spray	compress spray
lubricant	SAE30 (FC class)	SAE15W40	SAE15W40
capacity	1.0 L	1.0 L	1.0 L
replace		0.8L	0.8L
spark plug(NGK)	BP7HS(NGK)	C7HSA(carburetor) or CR7HSA(EMS)	C7HSA(carburetor) or CR7HSA(EMS)
clutch type	DRY TYPE	DRY TYPE	DRY TYPE
gear shift type	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)
clutch type	DRY TYPE	DRY TYPE	DRY TYPE
gear shift type	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)
GEAR OIL			
model	SAE 140	SAE 140	SAE 140
min. volume	90cc	90cc	90cc
total volume	110cc	110cc	110cc

REFERENCE DATA(1)

TYPE	BF-50	BF-125	BF-150
Valve Q'ty IN EX	NA	1 1	1 1
AIR CLEANER	SPONGE	PAPER	PAPER
FUEL: gasoline Tank capacity	UNLEADED ~6.0L	UNLEADED ~6.0L	UNLEADED ~6.0L
TIRE size (front) (rear)	120/70-12 130/70-12	120/70-12 130/70-12	120/70-12 130/70-12
ELECTRIC ignition generator	C.D.I AC MAGNET	C.D.I(carburetor) or Transistor(EMS)	C.D.I(carburetor) or Transistor(EMS)
BATTERY TYPE capacity	YTX4L-BS 12V 3AH	YTX7L-BS(carburetor) or YTX9-BS(EMS)	YTX7L-BS(carburetor) or YTX9-BS(EMS)
<u>BULBS</u> head lamp (HI /LO) rear lamp/ stop lamp signal lamp(FRT) signal lamp(REAR)	12V 35/35 W * 1 13.5V-0.41W 13.5V-1.89W 12V-5W * 1 13.5V-1.58W 13.5V-1.45W	12V 35/35 W * 1 13.5V-0.41W 13.5V-1.89W 12V-5W * 1 13.5V-1.58W 13.5V-1.45W	12V 35/35 W * 1 13.5V-0.41W 13.5V-1.89W 12V-5W * 1 13.5V-1.58W 13.5V-1.45W

REFERENCE DATA(2)

TYPE	BF2-50	BF2-125	BF2-150
DRY WEIGHT	~101KG	~118KG	~118KG
ENGINE			
type	2 stroke	4 stroke	4 stroke
model no.	P2	C1E5	C1E5
cooling	forced air cooling	forced air cooling	forced air & oil cooling
cylinder array	single	single	single
displacement	49 c.c	124.9 c.c	150.1 c.c
start system	electric and kick	electric and kick	electric and kick
lubrication system	separated pump	compress spray	compress spray
lubricant	SAE30 (FC class)	SAE15W40	SAE15W40
capacity	1.0 L	1.0 L	1.0 L
replace		0.8L	0.8L
spark plug(NGK)	BP7HS(NGK)	C7HSA(carburetor) or CR7HSA(EMS)	C7HSA(carburetor) or CR7HSA(EMS)
clutch type	DRY TYPE	DRY TYPE	DRY TYPE
gear shift type	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)
clutch type	DRY TYPE	DRY TYPE	DRY TYPE
gear shift type	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)
GEAR OIL			
model	SAE 140	SAE 140	SAE 140
min. volume	90cc	90cc	90cc
total volume	110cc	110cc	110cc

REFERENCE DATA(2)

TYPE	BF2-50	BF2-125	BF2-150
Valve Q'ty IN EX	NA	1 1	1 1
AIR CLEANER	SPONGE	PAPER	PAPER
FUEL: gasoline Tank capacity	UNLEADED ~6.0L	UNLEADED ~6.0L	UNLEADED ~6.0L
TIRE size (front) (rear)	110/70-12 120/70-12	110/70-12 120/70-12	110/70-12 120/70-12
ELECTRIC ignition generator	C.D.I AC MAGNET	C.D.I(carburetor) or Transistor(EMS)	C.D.I(carburetor) or Transistor(EMS)
BATTERY TYPE capacity	YTX4L-BS 12V 3AH	YTX7L-BS(carburetor) or YTX9-BS(EMS)	YTX7L-BS(carburetor) or YTX9-BS(EMS)
<u>BULBS</u> head lamp (HI /LO) rear lamp/ stop lamp signal lamp(FRT) signal lamp(REAR)	12V 55/35 W * 1 13.5V-0.034W 13.5V-0.66W 12V-5W * 1 13.5V-1.58W 13.5V-1.45W	12V 55/35 W * 1 13.5V-0.034W 13.5V-0.66W 12V-5W * 1 13.5V-1.58W 13.5V-1.45W	12V 55/35 W * 1 13.5V-0.034W 13.5V-0.66W 12V-5W * 1 13.5V-1.58W 13.5V-1.45W

Periodic Maintenance Record

Plan km	Actual km	Date	Dealer Sign.	Plan km	Actual km	Date	Dealer Sign.
300				14,000			
1,000				15,000			
2,000				16,000			
3,000				17,000			
4,000				18,000			
5,000				19,000			
6,000				20,000			
7,000				21,000			
8,000				22,000			
9,000				23,000			
10,000				24,000			
11,000				25,000			
12,000				26,000			
13,000				27,000			

- Please decrease maintenance period when often driving in dusty areas.
- Copy the blank table to use when odometers is over the above table planned.